

# **Technical Bulletin**

TB-1008-D Replaces TB-1008-C



CE

Gun Repair Kit No. 703536

## Professional Gravity Feed Spraygun





askus@carlisleft.com 800.445.3988 www.autorefinishdevilbiss.com



## **Table of Contents**

Торіс		Page
EC Decl	aration of Conformity	3
Operatio	onal Description	3
Constru Specific	ction Features, Materials of Construction, ations & Technical Data	4
Safety F	Precautions	5
Installa Spray G	tion, Operation, Preventive Maintenance & Cleaning,	6
Parts Re	eplacement/Maintenance	7–12
Α.	Servicing Air Valve	7–8
В.	Needle Packing, Spreader Valve Assembly, Fluid Supply Insert	9
С.	Spray Head Seal Replacement	
D.	Chart 1 – Air Caps Chart 2 – Fluid Nozzles & Fluid Needles	11
E.	Exploded View and Parts List	
Troubles	shooting Possible Problems in Operation	13–14
Accesso	pries	14
Warrant	у	

## NOTE:

When used with the HVLP cap, this gun can be used anywhere—both in mandated HVLP and unregulated areas.

When used with the High Efficiency cap, this gun can be used in unregulated areas and certain approved regulated areas. See **www.autorefinishdevilbiss.com** for a complete listing of approved areas and requirements for regulatory compliance.

Consult your local air quality management agency with any questions regarding HVLP or compliance requirements in your area.



## **Technical Bulletin TEKNA Pro Lite Gravity Feed Spraygun**

**IMPORTANT:** Read and follow all instructions and Safety Precautions before using this equipment. Keep for future use.

## EC Declaration of Conformity

**TEKNA** 

We, Finishing Brands UK, Ltd., Ringwood Rd, Bournemouth, Dorset, BH11 9LH, UK, as the manufacturer of the Spray gun model TEKNA PRO LITE, declare, under our sole responsibility, that the equipment to which this document relates is in conformity with the following standards or other normative documents:

BS EN 12100 PARTS 1 & 2: 2010, BS EN 1953: 1998+A1:2009; and thereby conform to the protection requirements of Council Directive 98/37/EEC relating to Machinery Safety Directive, and;

EN 13463-1:2009, council Directive 94/9/EC relating to Equipment and Protective Systems intended for use in Potentially Explosive Atmospheres protection level II 2 G X.

This product also complies with the requirements of the EPA guidelines, PG6/34. Transfer efficiency certificates are available on request.



The TEKNA Pro Lite Gravity Feed Spraygun Kit complies to ATEX regulations 94/9/EC, protection level II 2 G X, Suitable for use in Zones 1 and 2.

DeVilbiss Automotive Refinishing reserve the right to modify equipment specification without prior notice.

## **Operational Description**

The TEKNA Pro Lite spraygun is a lightweight professional gun designed to handle both water-based and solvent-based coating materials. Both HVLP and high efficiency models are available.

High volume, low pressure (HVLP) models are designed to reduce overspray and provide maximum transfer efficiency by limiting air cap pressure to 0.7 bar (10 psi) (complies with rules issued by SCAQMD and other air quality authorities).

HVLP models will produce approximately 0.7 bar (10 psi) air cap pressure at 1.6 bar (24 psi) gun inlet pressure with the trigger pulled. HVLP air cap #HV30 is designed for optimum basecoat and clear coat applications. An air cap test kit is available (see Accessories) which can be utilized to set the exact air cap pressure.

High efficiency models use air cap #TE10 or #TE20. These models are designed to provide optimum atomization of virtually all waterborne or solvent-based common coating materials at increased application rates while maintaining very high transfer efficiency. High efficiency models, when tested under recommended conditions with automotive refinishing materials, have been found to exceed 65% transfer efficiency.

High efficiency models comply with SCAQMD rules or certain other air quality authorities. Refer to the website www.autorefinishdevilbiss.com for a complete listing of approved areas and requirements for regulatory compliance.

**IMPORTANT:** These guns are not designed for use with highly corrosive and/or abrasive materials and if used with such materials it must be expected that the need for cleaning and/or replacement of parts will be increased. If there is any doubt regarding the suitability of a specific material, contact your TEKNA Distributor or TEKNA direct.

NOTE: This gun is not to be used with halogenated hydrocarbon solvents or cleaning agents such as 1,1,1,-Trichloroethane or methylene chloride. These solvents can react with the aluminium components used in this gun and cup. The reaction can become violent and lead to an equipment explosion.













## **Construction Features**

1	Air Cap (nickel plated brass for long durability)
2	Air Cap Retaining Ring (allows easy rotation of air cap)
3	Fluid Nozzle (not visible, ideal for automotive topcoat systems)
4	Fluid Needle (not visible)
5	Fluid Inlet (3/8 BSP thread – accepts TEKNA & DeVilbiss cups)
6	Air Inlet (universal thread, accepts G 1/4 & 1/4 NPS)
7	Self Adjusting Needle Packing (packing not visible, for long packing life)
8	Trigger (ergonomic for comfort)
9	Trigger Stud & Screw (easy replacement design)
10	Fan Air Adjustment (stepless regulation for flat to round spray)
11	Fluid Adjustment (stepless regulation of fluid volume)
12	Removable Spray Head (not visible, for long gun service life)
13	Interchangeable Colour ID System (4 coloured rings supplied)
14	Forged gun body (ergonomic, good looking & durable, easy to clean)
15	900cc Aluminium Cup (easy clean) (shown) or 20 oz. Acetal Cup (waterbourne) (not shown)
16	Push On Lid w/Drip Free Vent (disposable/easy clean design) (aluminum cup) or screw-on lid w/vent (acetal Cup)
17	Air Valve (not visible) (design offers low pull force & low pressure drop)
18	Gun acceptable for waterborne and solvent borne applications

## **Materials of Construction**

Gun Body	Anodized QuickClean <sup>®</sup> aluminium
Air Cap	Nickel plated brass
Fluid Nozzle, Fluid Needle, Fluid Inlet, Trigger Stud	Stainless steel
Spray Head, Air Cap Retaining Ring, Knobs	Anodized aluminium
Springs, Clips, Screws	Stainless steel
Seals, Gaskets	Solvent resistant
Trigger	Chrome plated steel
Handle Plug, Air Inlet, Body Bushing, Spreader Valve Body, Air Valve Nut	Chrome plated brass
Air Valve Assembly	Aluminum

## **Specifications & Technical Data**

Air Supply Connection	Universal 1/4" BSP and 1/4" NPS
Maximum Static Air Inlet Pressure	P1 = 12 bar (175 psi)
Nominal Gun Air Inlet Pressure for HVLP Models (with gun triggered)	1.6 bar (24 psi)
Nominal Gun Air Inlet Pressure for High Efficiency Models – TE20 cap (with gun triggered)	1.8 bar (26 psi) (for compliance)
Nominal Gun Air Inlet Pressure for High Efficiency Models – TE10 cap (with gun triggered)	2.4 bar (35 psi) (for compliance)
Air Consumption	See Chart 1 on page 11
Fluid Supply Connection	3/8" BSP
Service Temperature	0 to 40°C (32 to 100°F)
Gun Weight (gun only)	420g (14.8 oz.)

5

## **Safety Precautions**

This bulletin contains information that is important for you to know and understand. This information relates to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS. To help you recognize this information, we use the following symbols. Please pay particular attention to these sections.

WARNING	CAUTION	NOTE
Important safety information – A hazard that may cause serious injury or loss of life.	Important information that tells how to prevent damage to equipment, or how to avoid a situation that may cause minor injury.	Information that you should pay special attention to.

#### The following hazards may occur during the normal use of this equipment. Please read the following chart before using this equipment.

HAZARD	CAUSE	SAFEGUARDS
Fire	Solvent and coatings can be highly flammable or combustible especially when sprayed.	Adequate exhaust must be provided to keep air free of accumulations of flammable vapours.
		Smoking must never be allowed in the spray area.
		Fire extinguishing equipment must be present in the spray area.
Solvent Spray	During use and while cleaning and flushing, solvents can be forcefully expelled from fluid and air passages. Some solvents can cause eye injury.	Wear eye protection.
Inhaling Toxic Substances	Certain materials may be harmful if inhaled, or if there is contact with the skin.	Follow the requirements of the Material Safety Data Sheet supplied by your coating material manufacturer.
		Adequate exhaust must be provided to keep the air free of accumulations of toxic materials.
		Use a mask or respirator whenever there is a chance of inhaling sprayed materials. The mask must be compatible with the material being sprayed and its concentration. Equipment must be as prescribed by an industrial hygienist or safety expert, and be NIOSH approved.
Explosion Hazard – Incompatible Materials	Halogenated hydrocarbon solvents – for example; methylene chloride and 1,1,1,-Trichloroethane are not chemically compatible with the aluminium that might be used in many system components. The chemical reaction caused by these solvents reacting with aluminium can become violent and lead to an equipment explosion.	Guns with stainless steel internal passageways may be used with these solvents. However, aluminium is widely used in other spray application equipment – such as material pumps, regulators, valves, and cups. Check all equipment items before use and make sure they can also be used safely with these solvents. Read the label or data sheet for the material you intend to spray. If in doubt as to whether or not a coating or cleaning material is compatible, contact your material supplier.
General Safety	Improper operation or maintenance of equipment.	Operators should be given adequate training in the safe use and maintenance of the equipment (in accordance with the requirements of NFPA-33, Chapter 15). Users must comply with all local and national codes of practice and insurance company requirements governing ventilation, fire precautions, operation, maintenance, and housekeeping. These are OSHA Sections 1910.94 and 1910.107 and NFPA-33.
Cumulative Trauma disorders ("CTD's")	Use of hand tools may cause cumulative trauma disorders ("CTD's").	Pain, tingling, or numbness in the shoulder, forearm, wrist, hands, or fingers, especially during the night, may be early symptoms of a CTD. Do not
CTD's, or musculoskeletal disorders, involve damage to the hands, wrists, elbow, shoulders, neck and back. Carpal tunnel syndrome and tendonitis (such as tennis elbow or rotator cuff syndrome) are examples of CTD's.	<ul> <li>CTD's, when using hand tools, tend to affect the upper extremities. Factors which may increase the risk of developing a CTD include:</li> <li>1. High frequency of the activity.</li> <li>2. Excessive force, such as gripping, pinching, or pressing with the hands and fingers.</li> <li>3. Extreme or awkward finger, wrist, or arm positions.</li> <li>4. Excessive duration of the activity.</li> <li>5. Tool vibration.</li> <li>6. Repeated pressure on a body part.</li> <li>7. Working in cold temperatures.</li> <li>CTD's can also be caused by such activities as sewing, golf, tennis, and bowling, to name a few.</li> </ul>	immediately. Other early symptoms may include vague discomfort in the hand, loss of manual dexterity, and nonspecific pain in the arm. Ignoring early symptoms and continued repetitive use of the arm, wrist, and hand can lead to serious disability. Risk is reduced by avoiding or lessening factors 1-7.



WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.



#### INSTALLATION

For maximum transfer efficiency, **do not use more pressure than is necessary to atomise the material being applied.** 

 Connect the gun to a clean, moisture and oil free air supply using a hose size of at least 8 mm (5/16") I.D. hose. Do not use 6 mm I.D. hose (8 m x 6 mm hose at 510 LPM has a pressure loss of 1.8 bar. 8 m x 8 mm hose at 510 LPM has a pressure loss of 0.6 bar. [Do not use 1/4" I.D. hose (25' x 1/4" hose at 18 CFM has a pressure loss of 25 psi. 25' x 5/16" hose at 18 CFM has a pressure loss of 8 psi).] Depending on hose length, larger I.D. hose may be required.

#### NOTE

When gun is triggered on, adjust inlet air pressure (for recommended pressures see Chart 1 under Parts Replacement) at the gun inlet. (Pressure gauge shown under Accessories is recommended for this). **Do not use more pressure than is necessary to atomise the material being applied.** Excess pressure will create additional overspray and reduce transfer efficiency.

#### NOTE

If quick connects are required, use only high flow quick connects approved for HVLP use. Other types will not flow enough air for proper gun operation.

#### NOTE

If an air adjusting valve is used at the gun inlet, use a DeVilbiss air adjusting valve. Some competitive adjusting valves have significant pressure drop that can adversely affect spray performance. DeVilbiss air adjusting valves have minimal pressure drop.

2. Attach the gravity feed cup to the material inlet.

#### NOTE

Protective coating and rust inhibitors have been used to keep the gun in good condition prior to shipment. Before using the gun, flush it with solvents so that these materials will be removed from fluid passages.

#### **OPERATION**

- 1. Mix coating material to manufacturer's instructions and strain material.
- 2. Fill the cup with the required amount of material. Fill to no more than 19 mm (3/4") from the top of the cup. DO NOT OVERFILL.
- 3. Attach Cup Lid.
- 4. Turn fluid adjusting knob (28) clockwise to prevent fluid needle movement.
- 5. Turn spreader valve adjusting knob (16) counter clockwise to fully open.
- 6. Trigger gun on and adjust inlet air pressure (for recommended figures see Chart 1 under Parts Replacement) at the gun inlet. (Pressure gauge shown under Accessories is recommended for this).
- 7 Turn fluid adjusting knob (16) counter clockwise until first thread shows.

- 8. Test spray. If the finish is too dry, reduce airflow by reducing air inlet pressure.
- 9. If finish is too wet, reduce fluid flow by turning fluid adjusting knob (28) clockwise. If atomisation is too coarse, increase inlet air pressure. If too fine, reduce inlet pressure.
- 10. The pattern size can be reduced by turning spreader valve adjusting knob (16) clockwise.
- 11. Hold gun perpendicular to surface being sprayed. Arcing or tilting may result in uneven coating.
- 12. The recommended spray distance is 150-200 mm (6"-8").
- 13. Spray edges first. Overlap each stroke a minimum of 75%. Move gun at a constant speed.
- 14. Always turn off air supply and relieve pressure when gun is not in use.

### **PREVENTIVE MAINTENANCE & CLEANING**

To clean air cap and fluid nozzle, brush exterior with a stiff bristle brush. If necessary to clean cap holes, use a broom straw or toothpick if possible. If a wire or hard instrument is used, extreme care must be used to prevent scratching or burring of the holes which will cause a distorted spray pattern.

To clean fluid passages, remove excess material from cup, then flush with a suitable solvent. Wipe gun exterior with a solvent dampened cloth. Never completely immerse in solvent as this is detrimental to the lubricants and packings.

#### NOTE

When replacing the fluid nozzle or fluid needle, replace <u>both</u> at the same time. Using worn parts can cause fluid leakage. See page 11, Chart 2. Also, replace the needle packing at this time. Lightly lubricate the threads of the fluid nozzle before reassembling. Torque to 18–20 Nm (13–15 ft-lbs). Do not over tighten the fluid nozzle.

## CAUTION

To prevent damage to fluid nozzle (8) or fluid needle (24), be sure to either 1) pull the trigger and hold while tightening or loosening the fluid nozzle, or 2) remove fluid adjusting knob (28) to relieve spring pressure against needle collar.

### **SPRAY GUN LUBRICATION**

Daily, apply a drop of spray gun lubricant at trigger stud (40). The shank of fluid needle (24) where it enters packing nut (36) should also be oiled. Fluid needle packing (34) should be lubricated periodically. Make sure spray head (9) and air cap retaining ring (1) threads are clean and free of foreign matter. Before assembling air cap retaining ring to spray head, clean the threads thoroughly, then add two drops of spray gun

lubricant to threads. Fluid needle spring (25) and air valve spring (21) should be coated with a very light grease, making sure that any excess grease will not clog the air passages.

Points of Lubrication

- A. Trigger Points
- B. Packing
- C. Adjusting Knobs
- D. Air Cap Retaining Ring Threads

F

## Parts Replacement/ Maintenance

## **AIR VALVE INSTRUCTIONS**

## **Servicing Air Valve**

Reasons to service air valve:

- A) Air valve not functioning properly (may need cleaning).
- B) Routine maintenance.
- C) Air leaks.
- 1. Remove trigger screw (38) with Star T20 tool. (See fig 2).
- Remove trigger stud (40) and remove trigger (39) (See fig 3).
- Remove fluid adjusting knob (28) and spring (29). (See fig 4).
- 4. Remove fluid needle (24) (See fig 5).
- 5. Using a 6mm hex key, remove valve housing (27). (See Figs 6 and 7).
- 6. Remove spring (21) and valve spindle (20). (See Fig 8).
- 7. Using service tool (44), engage groove behind the valve seat (19) (See Fig 9).



## Ε



### **Servicing Air Valve**

(continued)

- 8. Withdraw the valve seat (19) from the gun body. (See fig 10).
- 9. Push out the front airvalve seal (18) with a finger. (See fig 11).
- 10. Turn the gun upside down and let the seal fall out. (See fig 12).
- 11. Fit new front seal (18) to service tool (44). Fit into gunbody and press firmly to ensure seal is engaged. (See fig 13).
- 12. Fit a new valve seat (19) to service tool (44). Groove must face outwards. (See fig 14).
- 13. Fit valve seat (19) to gunbody. (See fig 15)
- 14. Remove rear airvalve seal (22) from housing (27) with a hooked instrument.(See fig 16).
- 15. Fit new seal(22) to service tool (44). Groove must face outwards. Press seal (22) to housing (27). (See fig 17)
- Reassemble remaining parts in reverse order — valve (20), spring (21), housing (27) and tighten with 6mm hex key, needle (24) spring (29) and knob (28). Replace trigger (39), fitting trigger stud (40), screw in the trigger screw (38) with Star T20 tool.
- 17. Trigger gun fully and screw in fluid adjusting knob (28) until it stops. Back it off 1/2 turn and gun will have full needle travel.
- 18. Trigger gun several times to verify correct operation.

## Parts Replacement/ Maintenance

## NEEDLE PACKING REPLACEMENT INSTRUCTIONS

- 1. Remove trigger, fluid needle, and air valve following steps 1 to 6 on P7, servicing air valve.
- 2. Loosen and remove packing nut using a straight blade screwdriver. (See figs 18 & 19)
- 3. Discard old packing (34) and packing spring (35) if replacing. Clean packing if reusing. Also clean packing spring and nut (36). (See fig 20).
- 4. Re-assemble the packing, assemble into gunbody by hand and then tighten. (See fig 21)
- 5. Complete re-assembly following steps 16 to 18 on P8.









## **SPREADER VALVE ASSEMBLY REPLACEMENT/MAINTENANCE**

The spreader valve assembly can be replaced if damaged. Remove using a 14 mm wrench (See figs 22 & 23). The internal seal can be replaced and is included in the gun rebuild kit (See fig 24).

## FLUID SUPPLY INSERT

The fluid insert and seal are NOT replaceable. (See fig 25).

Do not remove these parts.

No maintenance is required for these parts other than regular cleaning of the internal bore.











## Parts Replacement/ Maintenance

## SPRAY HEAD SEAL REPLACEMENT

- 1. Remove air cap and retaining ring (6). (See fig 26).
- 2. Remove fluid adjusting knob (28), spring (25), and spring pad (26). (See fig 27).
- 3. Remove fluid needle (24) from gun body. (See fig 28).
- 4. Remove fluid nozzle using a 10mm wrench. (See fig 29).
- 5. Remove spray head (9) and seal (10) (See fig 30).
- 6. Remove seal (10) from spray head. (See fig 31).
- 7. Clean front of gun if required, using a soft brush, as well as the fluid nozzle, air cap, and retaining ring.
- 8. Place a new seal (10) into the front of the gun, making sure the flat of the seal is aligned to the flat in the gun. (See fig 32).
- Fit the spray head (9), making sure the pin is engaged into the hole in the gunbody. (See fig 33).
- Fit fluid nozzle (8), air cap and retaining Ring (6). Torque the fluid nozzle to 18–20 Nm (13–15 ft-lbs). Do not over torque the fluid nozzle. (See figs 34, and 35)
- Reassemble remaining parts in reverse order

   fluid needle (24), needle spring and pad (29), and fluid adjusting knob (28).
- 12. Trigger gun fully and screw in fluid adjusting knob (28) until it stops. Back it off 1/2 turn and gun will have full needle travel.
- 13. Trigger gun several times to verify correct operation.



## **Parts Replacement/Maintenance**

#### Chart 1 – Air Caps

ORDER NO. FOR AIR CAP	NUMBER ON CAP	RECOMMENDED INLET PRESSURE BAR/PSI	AIR FLOW LPM/SCFM
703540 (HVLP)	HV30	1.4 – 1.6 bar 20 – 24 psi	411 – 467 LPM 14.5 – 16.5 SCFM
703538 (High Efficiency)	TE10	1.4 – 2.4 bar 20 – 35 psi	212 – 311 LPM 7.5 – 11.0 SCFM
703539 (High Efficiency)	TE20	1.1 – 1.8 bar 16 – 26 psi	255 – 340 LPM 9 – 12 SCFM

**NOTE 1:** Guns with HVLP caps must not exceed 0.7 bar (10 psi) air cap pressure with gun fully triggered. (Aproximately 24 psi gun inlet pressure.) (See accessories for air cap test kit which is available to set the exact cap pressure.)

When used with the High Efficiency caps, this gun can be used in unregulated areas and certain approved regulated areas. See www.autorefinishdevilbiss.com for a complete listing of approved areas and requirements for regulatory compliance. Gun inlet pressure may be adjusted as required to any desired value in areas not requiring EPA compliance.

**NOTE 2:** When removing air cap from retaining ring, don't remove slip ring (2) or retaining ring seal (5) from retaining ring. Damage to the parts may occur. Slip ring and retaining ring seal are not available as replacements. Simply wipe parts clean and reassemble with new or clean air cap.

ORDER NO. FOR FLUID NOZZLE	NO. ON FLUID NOZZLE	TIP SIZE I.D. (MM)	NO. ON FLUID NEEDLE	ORDER NO. FOR FLUID NEEDLE
703521	PR0-200-12	1.2	PRO-301	703531
703522	PR0-200-13	1.3	PRO-301	703531
703523	PRO-200-14	1.4	PRO-301	703531
703589	PR0-200-15	1.5	PRO-301	703531

**Chart 2 – Fluid Nozzles & Fluid Needles** 

**NOTE:** When replacing the fluid nozzle or fluid needle, replace both at the same time. Lightly lubricate the threads of the fluid nozzle before reassembling. Torque to 18–20 Nm (13–15 ft-lbs). Don't over tighten the fluid nozzle. Use 10 mm wrench supplied with gun.





REF. NO.	DESCRIPTION	PART NO.	QTY
1	Air Cap Retaining Ring		1
2	Slip Ring		1
3	Air Cap		1
4	Air Cap Retaining Clip	191972	1
5	Retaining Ring Seal		1
6	Aircap & Ring	See chart 1 p11	1
7	Air Cap Retaining Ring & Seals	702725	1
8	Fluid Nozzle	See chart 2 p11	1
9	Spray head		1
*10	Spray head Seal	702726	1
11	Spray head kit	703529	1
*12	Circlip		1
13	Valve Body		1
*14	0 Ring		1
*15	Spreader Valve Pin		1
16	Spreader Valve Adjusting Knob		1
17	Spreader Valve Assembly	702730	1
18	Front Valve Seal		1
19	Valve Seat		1
20	Spindle		1
21	Air Valve Spring		1
22	Rear Valve Seal		1
23	Air Valve Kit	703530	1
24	Fluid Needle	See chart 2 p11	1
25	Needle Spring		1
26	Spring Pad		1
27	Housing & Seal Kit	703532	1
28	Fluid Adjusting Knob	703533	1
*29	Needle Spring Kit	703534	1
30	Gunbody		1

REF. NO.	DESCRIPTION	PART NO.	QTY
31	Air Inlet		1
32	Colour ID Ring Kit (4 Colours)	702735	1
33	Air Inlet Kit	702734	1
34	Needle Packing		1
35	Packing Spring		1
36	Packing Nut		1
*37	Packing, Spring and Packing Nut Kit	702731	1
*38	Trigger Screw		1
39	Trigger		1
*40	Trigger Stud		1
41	Trigger, Stud & Screw Kit	703535	1
42	Plug		1
43	Cheater Valve (optional)	702737	1
44	Air Valve Service Tool (only included in the Air Valve Kit 23)		
SERVICE PARTS			
Spray Gun repair kit (includes items marked *) 703536			
Seal and Pin Kit, kit of 5 (items 12, 14 and 15) 192229			



# Troubleshooting Possible Problems in Operation

CONDITION	CAUSE	CORRECTION
Heavy top or	Horn holes plugged	Clean. Ream with non-metallic point
bottom pattern		
	Obstruction on top or bottom	Clean.
	Con and for north and dirty	Clean
	Cap and/ or nozzie seat dirty.	
Heavy right	Left or right side horn holes plugged	Clean Ream with non-metallic point
or left side	Left of fight side form holes plugged.	Clean. Near with horemetalic point.
pattern	Dirt on left or right side of	Clean.
	fluid nozzle.	
Remedies for the top-heavy,	bottom-heavy, right-heavy, and left-heavy	y patterns:
1. Determine if the obstructi	on is on the air cap or the fluid nozzle. D	o this by making a test spray pattern.
Then, rotate the cap one-h	half turn and spray another pattern. If the	defect is inverted, obstruction is on the
air cap. Clean the air cap	as previously instructed. Also check for o	dried paint just inside the cap center hole
opening; remove by washi	ng with solvent.	
2. If the defect is not inverte	d, it is on the fluid nozzle. Clean nozzle.	Check for a fine burr on the edge of the
fluid nozzle. Remove with	#600 wet or dry sandpaper.	C
Heavy centre	Spreader adjustment valve set	Turn out counter clockwise to achieve
pattern	too low.	proper pattern.
	Atomising pressure too low.	Increase pressure.
	Material too thick.	Thin to proper consistency.
Split spray pattern	Atomisation air pressure too high	Reduce at regulator or gun handle
opint spray pattern	Fluid adjusting knob turned in	Turn out counter clockwise to achieve
	too far.	proper pattern.
	Spreader adjusting valve set too high.	Turn in clockwise to achieve proper
		pattern.
Jerky or fluttering spray	*Loose or damaged fluid nozzle/seat.	Tighten or replace.
_	Loose or broken cup fluid nipple.	Lighten or replace cup.
	Material level too low.	
	Container tipped too far.	Hold more upright.
	Obstruction in fluid passage.	Back flush with solvent.
	Domogod fluid poodlo pooking	Replace
Linable to get round spray	Spreader valve not seating properly	Clean or replace
Chable to get found spray	Air cap retaining ring loose	Tighten.
Will not sprav	No air pressure at gun.	Check air supply and air lines, blow out
		gun air passages.
	Fluid adjusting knob not	Turn out counter clockwise.
	open enough.	
	Fluid too heavy for gravity feed.	Thin material and/or change to larger
Baint hubbles in our	Fluid pozzlo pot tight	Tiuld hozzle size.
Fluid leaking or drinning	Cup lid loose	Push in or replace
from cup lid	Dirty cup or lid	Clean
	Cracked cup or lid.	Replace cup and lid
Champed annual		Deals fluid adjusting back sub-sub-
Starved spray pattern	mauequate material flow.	to larger fluid nozzle size
	I ow atomisation air pressure	Increase air pressure and
		rebalance gun.
Excessive overspray	Too much atomisation air pressure.	Reduce pressure.
	Gun too far from work surface.	Adjust to proper distance.
	Improper stroking (arcing, gun motion	Move at moderate pace, parallel to
	too fast).	work surface.
Excessive fog	Too much or too-fast-drying thinner.	Remix properly.
	Too much atomisation air pressure.	Reduce pressure.
Dry spray	Air pressure too high.	Reduce air pressure.
	Gun too far from work surface.	Adjust to proper distance.
	Gun motion too fast.	Slow down.
	Gun out of adjustment.	Adjust.
Fluid leaking from	Packing nut loose.	lighten.
packing nut	Packing worn.	Keplace.

\*Most common problem.



#### Troubleshooting Possible Problems in Operation (cont'd)

CONDITION	CAUSE	CORRECTION
Fluid leaking or dripping from front of gun	Fluid nozzle or fluid needle worn or damaged.	Replace fluid nozzle and fluid needle.
	Foreign matter in fluid nozzle.	Clean.
	Fluid needle spring broken.	Replace.
	Wrong size fluid needle or fluid nozzle.	Replace fluid nozzle and fluid needle.
Fluid dripping or leaking	Cup loose on gun.	Tighten
from bottom of cup	Cup threads dirty.	Clean.
Runs and sags	Too much material flow.	Turn fluid adjusting knob clockwise or switch to smaller fluid nozzle and fluid needle size.
	Material too thin.	Mix properly or apply light coats.
	Gun tilted on an angle, or gun motion	Hold gun at right angle to work and
	too slow.	adapt to proper gun technique.
Thin, sandy coarse finish drying before it flows out	Gun too far from surface.	Check distance. Normally approx. 150–200 mm (6–8").
	Too much air pressure.	Reduce air pressure and check spray pattern.
	Improper thinner being used.	Follow paint manufacturer's mixing instructions.
Thick, dimpled finish "orange peel"	Gun too close to surface.	Check distance. Normally approx. 150–200 mm (6–8"). Too much material coarsely atomised.
	Air pressure too low.	Increase air pressure or reduce fluid flow.
	Improper thinner being used.	Follow paint manufacturer's mixing instructions.
	Material not properly mixed.	Follow paint manufacturer's mixing instructions.
	Surface rough, oily, dirty.	Properly clean and prepare.

## Accessories





This product is manufactured in the UK by: Finishing Brands UK, Ltd. Ringwood Road, Bournemouth, BH11 9LH, UK

Distributed exclusively in North America by: DeVilbiss Automotive Refinishing Swanton, OH 43558





#### WARRANTY POLICY

DeVilbiss products are covered by Finishing Brands two year materials and workmanship limited warranty. The use of any parts or accessories, from a source other than Finishing Brands, will void all warranties. For specific warranty information please contact the closest Finishing Brands location listed below.

Finishing Brands reserves the right to modify equipment specifications without prior notice. DeVilbiss<sup>®</sup>, Ransburg<sup>®</sup>, BGK<sup>®</sup>, and Binks<sup>®</sup> are registered trademarks of Carlisle Fluid Technologies, Inc., dba Finishing Brands. ©2015 Carlisle Fluid Technologies, Inc., dba Finishing Brands. All rights reserved.



DeVilbiss Automotive Refinishing is part of Finishing Brands, a global leader in innovative spray finishing technologies. For technical assistance or to locate an authorized distributor, contact one of our sales and customer support locations below.

#### **USA/Canada**

www.autorefinishdevilbiss.com askus@carlisleft.com Toll Free Tel: 1-800-445-3988 Toll Free Fax: 1-800-445-6643 Mexico www.autorefinishdevilbiss.com.mx Toll Free Tel: 1-888-835-6232 USA

Finishing Brands.

A CARLISLE COMPANY

